

Setup Sheet
Series 804L & 808L

<u>Run Parameters</u>		<u>Configuration</u>		<u>Terminals</u>	
Unit	°F	P1	cA.tc	Terminals	1A&1B
AL2	1800	P2	NNNN	Out1	Not assigned
AL2.H	1	P3	-328		
oFS	0	P4	2502	Terminals	2A&2B
FiLt	1.6	P11	NONE	Out2	Not assigned
UcAL	IdLE	P12	NONE		
		P13	NONE	Terminals	3A&3B
		P14	AL2.I	Out3	Not assigned
		P21	NONE		
		P24	HI	Terminals	4B&4A
		P25	MAN	Out4	Alr2
		P26	no		(High Limit)
		P27	NONE		
		P35	LAT		
		P37	AL2		
		P51	NONE		
		P52	NONE		
		P61	1		
		P62	19.2		
		P63	NONE		
		P64	NONE		
		P71	AC.AL		
		P72	AC.AL		
		P73	AC.AL		
		P74	AL.2		
		P75	NONE		
		P76	2		
		P77	4		
		rEc.S	NONE		
		rec.L	NONE		
		PHAS	NONE		